



Silicone Soft Grip (Comfort) Pen Kits - Assembly Instructions

A. Cutting Blanks:

Cut blanks length of the brass plus 1/8" extra on each side to allow for trimming. Starting with a solid 5/8" to 3/4" square blank free of checks or other defects will help ensure good results and enhance safety.

B. Drilling:

Drill the blanks using a drill press and clamp or other suitable device for securing the blank in an upright position to ensure stability throughout the drilling process. Ensure the blank is a true 90 degrees to the drill press table. Drill a 7mm hole through the center of each blank.

C. Glue the Blanks:


Lightly sand the exterior of each brass tube with fine sandpaper to ensure adhesion. Using a small cork or potato slice will help keep glue out of the inside of each tube during the process which will improve the ease at which components fit together. Using a good quality wood glue, polyurethane glue or Cyanoacrylate glue, coat the inside of the blank and then the brass tube with your glue of choice. Insert the tube fully into the blank, cork end first. Expel the cork and clean up any remaining excess glue. Wait the required wait time for the selected glue as determined by the manufacturer.

D. Dress the Ends:

Using a belt sander or barrel trimmer, true the ends to an accurate 90 degrees and remove any excess wood until the brass is just revealed. Removing too much brass may hinder future assembly.

E. Turning the Blanks:

Slide the bushing and the pen blanks onto the mandrel in the order required, use the diagram to help line up the blanks and bushings.

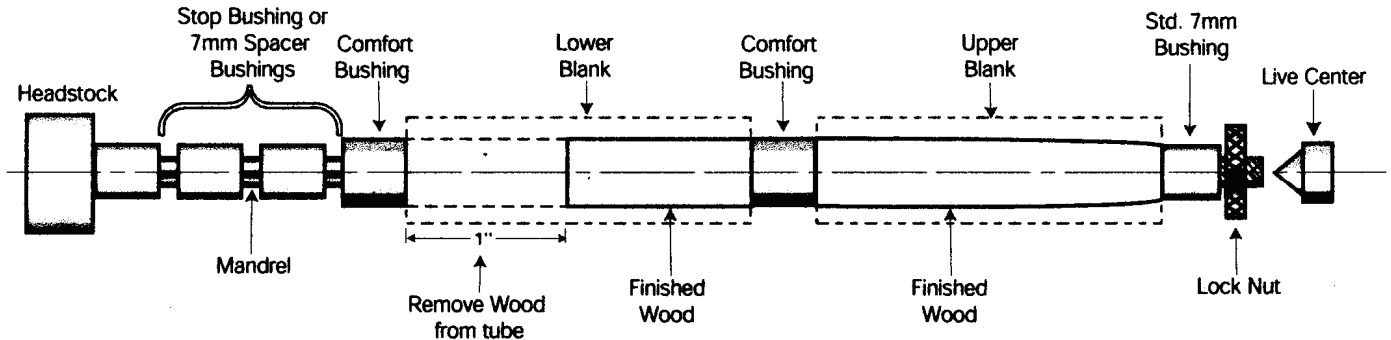

After aligning the bushings and blanks, thread the lock nut and hand tighten. The turning unit should now be secure on the mandrel. Slide the tail stock over and set in place next to the mandrel ensuring there is enough pressure to secure the mandrel (do not over tighten or the mandrel and live center could be damaged). Turn the blank down to the approximate diameter of the bushings and then sand to the desired finished diameter. Measure 1 inch and remove body material down to the brass to accommodate the soft grip.

F. Sanding:


Once the pen is turned to approximately 1/16" of the final diameter (more if wood is brittle or hard to turn) switch to sand paper and sand to the diameter of the bushings. Start with course 150 to 220 grit and work consecutively to finer diameter sandpaper, 400 to 600 grit or finer.

G. Finishing:

Finish with your desired wax or friction polish. If using a polyurethane finish, ensure not to weld the bushings to the blanks.

H. Assembly:

Use a clamp or vice with wooden jaws to prevent damage to the pen components. Excess pressure on the components could cause damage so ensure all tubes are free of glue or any burs. A pen press is especially useful for pen assembly.

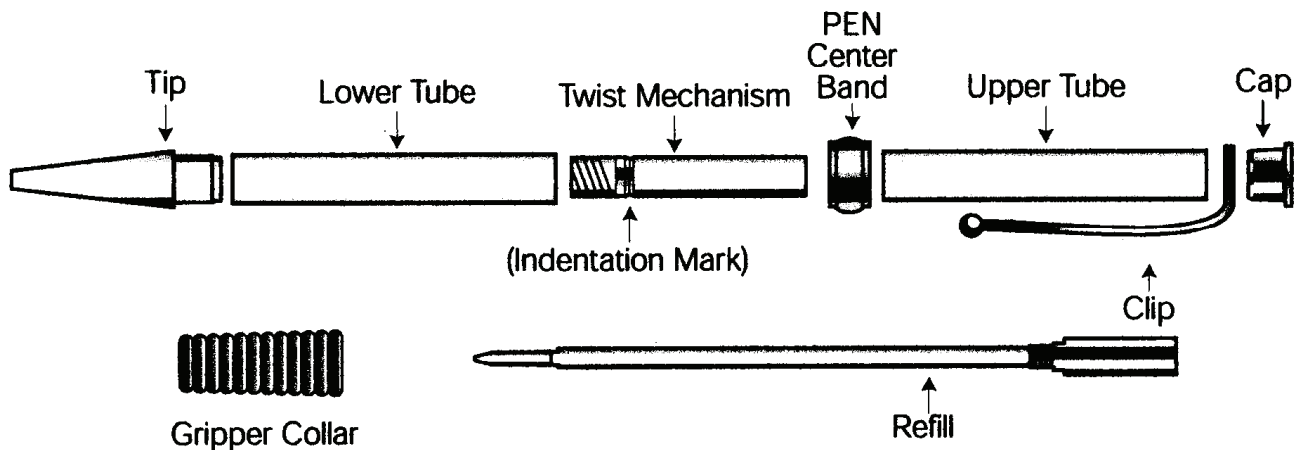

1. Slide the soft grip over the 1 inch section that was removed and press the tip into one end of the lower tube.
2. Press the twist mechanism into the opposite end of the front blank just down to the indentation, insert the refill and test. Remove refill and insert deeper if required. Caution: Do not push the twist mechanism too far or the pen refill won't retract completely.
3. Insert the clip and end cap into the end of the upper tube assembly.
4. Push the center band over the twist mechanism.
5. Push the two halves together and ...

Congratulations, you have just completed the Soft Grip (Comfort) Pen!

If you have any problems, feel free to contact me at your convenience.