



Stylus Pen Kit Designer/European Series * **Assembly Instructions**

* May also be used on Park Avenue, Congressional, Dignitary, and Twin Towers Designer-Based Pen Kits.

A. Cutting Blanks:

Cut blanks length of the brass plus 1/8" extra on each side to allow for trimming. Starting with a solid 3/4" square blank free of checks or other defects will help ensure good results and enhance safety.

B. Drilling:

Drill the blanks using a drill press and clamp or other device suitable for securing the blank in an upright position to ensure stability throughout the drilling process. Ensure the blank is a true 90 degrees to the drill press table. Drill a 7mm hole through the center of each blank.

C. Glue the Blanks:

Lightly sand the exterior of each brass tube with fine sandpaper to ensure glue adhesion. Using a small cork or potato slice will help keep glue out of the inside of each tube during the process, which will improve the ease at which components fit together. Using a good quality wood glue, polyurethane glue or Cyanoacrylate glue, coat the inside of the blank and then the brass tube with your glue of choice.


Insert the tube fully into the blank, cork end first. Expel the cork and clean up any remaining excess glue. Wait the required wait time for the selected glue as determined by the manufacturer.

D. Dress the Ends:

Using a belt sander or barrel trimmer, true the ends to an accurate 90 degrees and remove any excess wood until the brass is just revealed. Removing too much brass may hinder future assembly.

E. Turning the Blanks:

Slide the bushing and the pen blanks onto the mandrel in the order required. Use the diagram to help line up the blanks and bushings.

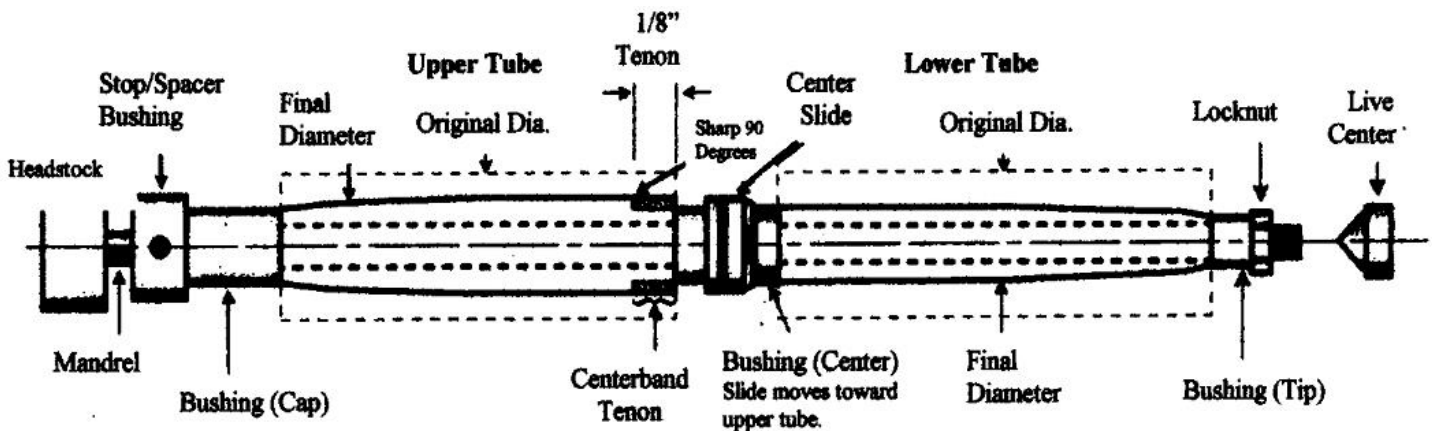

Ensure the center slide bushing can move toward the upper tube assembly. After aligning the bushings and blanks, thread the lock nut and hand tighten. The turning unit should now be secure on the mandrel. Slide the tail stock over and set in place next to the mandrel, ensuring there is enough pressure to secure the mandrel (do not over tighten or the mandrel and live center could be damaged). Turn the blank down to the approximate diameter of the bushings and then sand to the desired finished diameter.

CAUTION: The center band bushing should fit snugly over the tenon or else the center band will not fit well during final assembly. The upper end of the lower tube is a critical dimension and if it is too large, the two halves will not rotate smoothly when assembled.

F. Sanding:


Once the pen is turned to approximately 1/16" of the final diameter (more if wood is brittle or hard to turn), switch to sand paper and sand to the diameter of the bushings. Start with course 150 to 220 grit and work consecutively to finer diameter sandpaper, 400 to 600 grit or finer.

G. Finishing:

Finish with your desired wax or friction polish. If using a polyurethane finish, ensure not to weld the bushings to the blanks.

H. Assembly:

Use a clamp or vice with wooden jaws to prevent damage to the pen components. A pen press is especially useful for pen assembly.

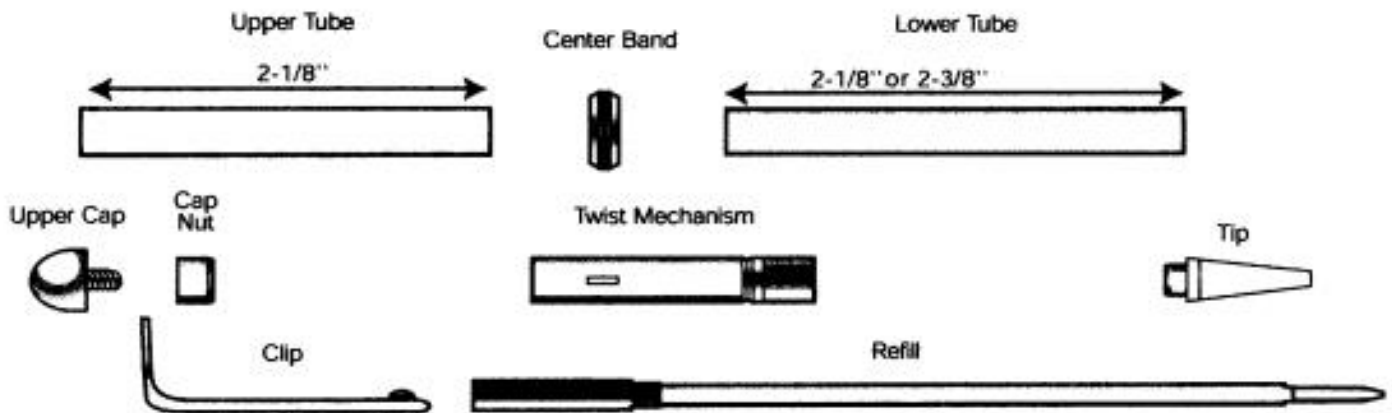

1. Press the tip into the tapered end of the long blank.

2. Press the twist mechanism into the opposite end of the lower tube.

CAUTION: Do not push the mechanism too far into the tube or the refill will not retract inside the tip. You may find it easier to scribe a mark approximately 13/16” from the chrome end and press into the tube up to the scribe. Each pen may vary, so press and test the refill each time.

3. Use a drop or two of CA glue to secure the center band onto the tenon of the short blank. Use CA glue remover to remove any accidental CA excess, being careful not to damage the pen’s finish.
4. Press the clip retaining cap nut into the opposite end of the short tube and then screw on the clip using the STYLUS end cap.
5. Press the two halves together.

Congratulations, you have just completed the Designer/European Stylus Pen!



If you have any problems, feel free to contact me at your convenience.